

Instructions for installing and maintaining your Bow Saver

Your Bow Saver should be placed on the bow eye with the (Die-Cut) **decal facing up**, and your clips or lines attached to the eye. **Plastic will sink if dropped in the water.** We suggest that you attach a lanyard or safety line to either the mooring line, or clip, using the following procedure:

Locate the cross-hairs (+) on the decal side of the unit. Use them as a center point, and drill either a quarter inch hole, or two 1/8" holes on the outside ends of the crosshair.

We suggest using either fishing line or leader for your lanyard.

Slip the line through from the bottom of the unit and tie a knot, or tie it off using the two holes on the decal side. Cut the line to the length needed. Attach the lanyard or safety line to your mooring line or clip, and the unit will be secure from dropping into the water. We recommend drilling no more than a three sixteenth or quarter inch hole(s) in the unit and only where the crosshairs are located.

Each year after the boating season it is recommend that you **wash the Bow Saver** in a mild detergent, dry it off, store it and it will be ready for the next year's service. If you have any questions e-mail our customer service department at:

ASICustomerService@msn.com